

CRANKCASE HEATER WIRING DIAGRAM

CRANKCASE HEATER WIRING DIAGRAM IS ESSENTIAL FOR HVAC PROFESSIONALS AND TECHNICIANS WHO WORK WITH REFRIGERATION AND AIR CONDITIONING SYSTEMS. UNDERSTANDING THE WIRING DIAGRAM OF A CRANKCASE HEATER ENSURES PROPER INSTALLATION, TROUBLESHOOTING, AND MAINTENANCE, WHICH ULTIMATELY PROTECTS THE COMPRESSOR FROM DAMAGE CAUSED BY REFRIGERANT MIGRATION AND LOW OIL TEMPERATURES. THIS ARTICLE PROVIDES AN IN-DEPTH EXPLANATION OF CRANKCASE HEATER WIRING DIAGRAMS, COMMON WIRING CONFIGURATIONS, SAFETY PRECAUTIONS, AND PRACTICAL TIPS FOR DIAGNOSING ELECTRICAL ISSUES. BY MASTERING THESE CONCEPTS, TECHNICIANS CAN ENHANCE SYSTEM RELIABILITY AND PREVENT COSTLY REPAIRS. THE DETAILED GUIDE INCLUDES STEP-BY-STEP INSTRUCTIONS AND BEST PRACTICES FOR WIRING CRANKCASE HEATERS CORRECTLY ACCORDING TO INDUSTRY STANDARDS. BELOW IS THE TABLE OF CONTENTS OUTLINING THE MAIN TOPICS COVERED IN THIS COMPREHENSIVE ARTICLE.

- UNDERSTANDING CRANKCASE HEATERS
- COMPONENTS OF A CRANKCASE HEATER WIRING DIAGRAM
- COMMON WIRING CONFIGURATIONS
- STEP-BY-STEP WIRING INSTRUCTIONS
- TROUBLESHOOTING CRANKCASE HEATER WIRING ISSUES
- SAFETY PRECAUTIONS AND BEST PRACTICES

UNDERSTANDING CRANKCASE HEATERS

A CRANKCASE HEATER IS A DEVICE INSTALLED ON REFRIGERATION COMPRESSORS TO PREVENT REFRIGERANT MIGRATION AND CONDENSATION INSIDE THE COMPRESSOR DURING OFF CYCLES OR COLD AMBIENT CONDITIONS. THIS HEATER MAINTAINS THE OIL TEMPERATURE, PREVENTING DILUTION AND ENSURING PROPER LUBRICATION UPON STARTUP. A CLEAR UNDERSTANDING OF THE CRANKCASE HEATER WIRING DIAGRAM IS CRUCIAL FOR CORRECT APPLICATION AND TO AVOID ELECTRICAL FAULTS THAT COULD LEAD TO COMPRESSOR FAILURE.

FUNCTION AND IMPORTANCE

CRANKCASE HEATERS SERVE AS A PREVENTIVE MEASURE TO PROTECT COMPRESSORS FROM THE HARMFUL EFFECTS OF REFRIGERANT MIXING WITH THE OIL. WHEN THE COMPRESSOR IS OFF, REFRIGERANT CAN CONDENSE IN THE CRANKCASE, LEADING TO OIL DILUTION AND INADEQUATE LUBRICATION DURING STARTUP. A PROPERLY WIRED CRANKCASE HEATER WARMS THE CRANKCASE, KEEPING THE OIL AT AN OPTIMAL TEMPERATURE AND PRESERVING COMPRESSOR INTEGRITY.

TYPES OF CRANKCASE HEATERS

THERE ARE PRIMARILY TWO TYPES OF CRANKCASE HEATERS: STRIP HEATERS AND BAND HEATERS. STRIP HEATERS ARE FLAT AND MOUNTED DIRECTLY ONTO THE COMPRESSOR SHELL, WHILE BAND HEATERS WRAP AROUND THE COMPRESSOR. BOTH TYPES REQUIRE SPECIFIC WIRING CONFIGURATIONS, WHICH ARE DEPICTED IN CRANKCASE HEATER WIRING DIAGRAMS.

COMPONENTS OF A CRANKCASE HEATER WIRING DIAGRAM

A CRANKCASE HEATER WIRING DIAGRAM ILLUSTRATES THE ELECTRICAL CONNECTIONS AND COMPONENTS NEEDED TO INSTALL AND

OPERATE THE HEATER SAFELY. UNDERSTANDING EACH COMPONENT HELPS TECHNICIANS FOLLOW THE WIRING DIAGRAM ACCURATELY AND ENSURES RELIABLE OPERATION.

KEY ELECTRICAL COMPONENTS

- **CRANKCASE HEATER ELEMENT:** THE HEATING COIL OR ELEMENT THAT GENERATES HEAT WHEN ENERGIZED.
- **POWER SUPPLY:** TYPICALLY A 120V OR 240V AC SOURCE DEPENDING ON THE SYSTEM REQUIREMENTS.
- **THERMOSTAT OR CONTROL RELAY:** CONTROLS THE OPERATION OF THE HEATER BASED ON TEMPERATURE OR SYSTEM STATUS.
- **FUSES OR CIRCUIT BREAKERS:** PROVIDE OVERCURRENT PROTECTION TO PREVENT ELECTRICAL HAZARDS.
- **WIRING TERMINALS AND CONNECTORS:** FACILITATE SECURE ELECTRICAL CONNECTIONS BETWEEN COMPONENTS.

INTERPRETING THE WIRING DIAGRAM SYMBOLS

WIRING DIAGRAMS USE STANDARDIZED SYMBOLS TO REPRESENT COMPONENTS AND CONNECTIONS. FAMILIARITY WITH THESE SYMBOLS IS ESSENTIAL FOR CORRECTLY READING AND IMPLEMENTING CRANKCASE HEATER WIRING DIAGRAMS. SYMBOLS TYPICALLY INCLUDE LINES FOR WIRES, RECTANGLES FOR HEATERS, SWITCHES FOR THERMOSTATS, AND CIRCLES FOR CONNECTORS.

COMMON WIRING CONFIGURATIONS

CRANKCASE HEATERS CAN BE WIRED IN SEVERAL CONFIGURATIONS DEPENDING ON THE COMPRESSOR TYPE, POWER SUPPLY, AND CONTROL STRATEGY. THE WIRING DIAGRAM PROVIDES A VISUAL GUIDE TO THESE CONFIGURATIONS, ENSURING COMPATIBILITY AND SAFETY.

SINGLE-PHASE WIRING

IN SINGLE-PHASE SYSTEMS, THE CRANKCASE HEATER IS OFTEN CONNECTED DIRECTLY ACROSS THE LINE AND NEUTRAL WIRES. THE WIRING DIAGRAM SHOWS THE HEATER ELEMENT WIRED IN PARALLEL WITH THE COMPRESSOR'S SUPPLY, SOMETIMES THROUGH A CONTROL RELAY OR CONTACTOR TO ENABLE SWITCHING.

THREE-PHASE WIRING

FOR THREE-PHASE COMPRESSORS, THE CRANKCASE HEATER WIRING DIAGRAM MAY ILLUSTRATE CONNECTION TO ONE PHASE OR ACROSS MULTIPLE PHASES, DEPENDING ON VOLTAGE AND HEATER SPECIFICATIONS. CONTROL DEVICES LIKE RELAYS OR THERMOSTATS ARE INTEGRATED TO MANAGE HEATER OPERATION EFFECTIVELY.

CONTROL INTEGRATION

MANY WIRING DIAGRAMS INCLUDE THERMOSTATS OR TEMPERATURE SENSORS WIRED IN SERIES OR PARALLEL WITH THE HEATER TO REGULATE ITS FUNCTION. THIS INTEGRATION PREVENTS OVERHEATING AND ENHANCES ENERGY EFFICIENCY BY ACTIVATING THE HEATER ONLY WHEN NECESSARY.

STEP-BY-STEP WIRING INSTRUCTIONS

FOLLOWING A CRANKCASE HEATER WIRING DIAGRAM REQUIRES METHODICAL STEPS TO ENSURE PROPER ELECTRICAL CONNECTIONS AND SYSTEM FUNCTIONALITY. THE STEPS BELOW OUTLINE A GENERAL PROCEDURE USED BY PROFESSIONALS DURING INSTALLATION OR MAINTENANCE.

PREPARATION AND SAFETY CHECKS

BEFORE WIRING, CONFIRM THAT THE POWER SUPPLY IS DISCONNECTED AND THAT ALL COMPONENTS MEET THE SYSTEM SPECIFICATIONS. GATHER NECESSARY TOOLS, AND VERIFY THE CORRECT WIRING DIAGRAM FOR THE SPECIFIC HEATER MODEL AND COMPRESSOR.

WIRING PROCEDURE

1. IDENTIFY THE HEATER TERMINALS AND CORRESPONDING WIRES AS INDICATED ON THE WIRING DIAGRAM.
2. CONNECT THE HEATER ELEMENT WIRES TO THE DESIGNATED POWER SUPPLY TERMINALS, ENSURING PROPER POLARITY IF APPLICABLE.
3. INSTALL ANY CONTROL DEVICES SUCH AS THERMOSTATS OR RELAYS IN SERIES WITH THE HEATER CIRCUIT ACCORDING TO THE DIAGRAM.
4. SECURE ALL CONNECTIONS USING APPROVED CONNECTORS OR TERMINAL BLOCKS TO PREVENT LOOSE WIRING.
5. VERIFY THAT PROTECTIVE DEVICES SUCH AS FUSES OR BREAKERS ARE CORRECTLY INSTALLED AND RATED.
6. RESTORE POWER AND TEST THE HEATER OPERATION BY MEASURING VOLTAGE AND CURRENT TO CONFIRM PROPER FUNCTION.

TROUBLESHOOTING CRANKCASE HEATER WIRING ISSUES

ELECTRICAL PROBLEMS RELATED TO CRANKCASE HEATER WIRING CAN CAUSE COMPRESSOR DAMAGE OR SYSTEM FAILURES. DIAGNOSING THESE ISSUES INVOLVES INTERPRETING THE WIRING DIAGRAM AND TESTING COMPONENTS SYSTEMATICALLY.

COMMON PROBLEMS AND SYMPTOMS

- HEATER NOT ENERGIZING DUE TO BLOWN FUSE OR TRIPPED BREAKER.
- OPEN OR SHORTED HEATER ELEMENT DETECTED THROUGH RESISTANCE TESTING.
- LOOSE OR CORRODED WIRING CONNECTIONS LEADING TO INTERMITTENT OPERATION.
- INCORRECT WIRING CAUSING HEATER TO RUN CONTINUOUSLY OR NOT AT ALL.

DIAGNOSTIC PROCEDURES

USING A MULTIMETER, TECHNICIANS CAN MEASURE CONTINUITY, RESISTANCE, AND VOLTAGE AT VARIOUS POINTS INDICATED ON THE WIRING DIAGRAM. COMPARING READINGS AGAINST MANUFACTURER SPECIFICATIONS HELPS IDENTIFY FAULTS. ADDITIONALLY, VERIFYING CONTROL DEVICE OPERATION ENSURES THE HEATER IS ACTIVATED UNDER APPROPRIATE CONDITIONS.

SAFETY PRECAUTIONS AND BEST PRACTICES

WORKING WITH ELECTRICAL WIRING REQUIRES ADHERENCE TO SAFETY STANDARDS AND BEST PRACTICES TO PREVENT HAZARDS AND ENSURE SYSTEM LONGEVITY. THE CRANKCASE HEATER WIRING DIAGRAM SERVES AS A CRITICAL REFERENCE TO AVOID MISTAKES AND COMPLY WITH ELECTRICAL CODES.

IMPORTANT SAFETY GUIDELINES

- ALWAYS DISCONNECT POWER BEFORE WORKING ON THE WIRING.
- USE INSULATED TOOLS AND WEAR APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT.
- FOLLOW MANUFACTURER INSTRUCTIONS AND LOCAL ELECTRICAL CODES STRICTLY.
- VERIFY ALL CONNECTIONS ARE SECURE AND PROPERLY INSULATED TO PREVENT SHORTS OR SHOCKS.
- TEST THE SYSTEM THOROUGHLY AFTER WIRING TO CONFIRM SAFE AND CORRECT OPERATION.

MAINTENANCE TIPS

REGULAR INSPECTION OF CRANKCASE HEATER WIRING AND COMPONENTS HELPS DETECT WEAR, CORROSION, OR DAMAGE EARLY. KEEPING WIRING CLEAN AND CONNECTIONS TIGHT PREVENTS ELECTRICAL FAILURES. ADDITIONALLY, PERIODIC TESTING OF HEATER RESISTANCE AND OPERATION ENSURES ONGOING PROTECTION FOR THE COMPRESSOR.

FREQUENTLY ASKED QUESTIONS

WHAT IS A CRANKCASE HEATER WIRING DIAGRAM?

A CRANKCASE HEATER WIRING DIAGRAM IS A SCHEMATIC THAT SHOWS HOW TO CONNECT THE CRANKCASE HEATER TO THE ELECTRICAL SYSTEM OF AN HVAC UNIT OR COMPRESSOR. IT HELPS IN PROPER INSTALLATION AND TROUBLESHOOTING.

WHY IS A CRANKCASE HEATER IMPORTANT IN HVAC SYSTEMS?

A CRANKCASE HEATER PREVENTS REFRIGERANT MIGRATION AND OIL DILUTION IN THE COMPRESSOR DURING OFF CYCLES BY WARMING THE CRANKCASE, WHICH HELPS MAINTAIN COMPRESSOR EFFICIENCY AND LONGEVITY.

HOW DO I READ A CRANKCASE HEATER WIRING DIAGRAM?

TO READ A CRANKCASE HEATER WIRING DIAGRAM, IDENTIFY THE POWER SOURCE, THE HEATER, AND CONTROL COMPONENTS SUCH AS THERMOSTATS OR RELAYS. FOLLOW THE LINES INDICATING ELECTRICAL CONNECTIONS AND NOTE VOLTAGE RATINGS AND TERMINAL LABELS.

CAN I WIRE A CRANKCASE HEATER DIRECTLY TO A POWER SUPPLY?

TYPICALLY, A CRANKCASE HEATER IS WIRED THROUGH THE HVAC UNIT'S CONTROL CIRCUIT OR A DEDICATED RELAY TO ENSURE IT OPERATES SAFELY AND ONLY WHEN NEEDED. DIRECT WIRING TO POWER WITHOUT CONTROLS IS NOT RECOMMENDED.

WHERE IS THE CRANKCASE HEATER LOCATED IN THE WIRING DIAGRAM?

IN THE WIRING DIAGRAM, THE CRANKCASE HEATER IS USUALLY REPRESENTED AS A RESISTIVE ELEMENT CONNECTED TO THE COMPRESSOR CIRCUIT OR A DEDICATED TERMINAL BLOCK, OFTEN LABELED SPECIFICALLY AS "CRANKCASE HEATER" OR "HEATER."

WHAT VOLTAGE IS TYPICALLY USED FOR CRANKCASE HEATERS?

CRANKCASE HEATERS COMMONLY OPERATE AT 120V OR 240V, DEPENDING ON THE HVAC SYSTEM DESIGN AND THE HEATER SPECIFICATIONS INDICATED IN THE WIRING DIAGRAM.

HOW CAN I TROUBLESHOOT WIRING ISSUES USING A CRANKCASE HEATER WIRING DIAGRAM?

USING THE WIRING DIAGRAM, VERIFY ALL CONNECTIONS ARE CORRECT AND INTACT, CHECK FOR BLOWN FUSES OR TRIPPED BREAKERS IN THE HEATER CIRCUIT, AND USE A MULTIMETER TO TEST FOR CONTINUITY AND VOLTAGE AT THE HEATER TERMINALS.

IS IT NECESSARY TO FOLLOW THE CRANKCASE HEATER WIRING DIAGRAM EXACTLY?

YES, FOLLOWING THE CRANKCASE HEATER WIRING DIAGRAM EXACTLY IS IMPORTANT TO ENSURE SAFETY, PROPER HEATER OPERATION, AND TO AVOID DAMAGE TO THE COMPRESSOR OR HVAC SYSTEM.

ADDITIONAL RESOURCES

1. *CRANKCASE HEATER WIRING DIAGRAMS: A COMPREHENSIVE GUIDE*

THIS BOOK OFFERS AN IN-DEPTH EXPLORATION OF CRANKCASE HEATER WIRING DIAGRAMS, EXPLAINING THE FUNCTION AND IMPORTANCE OF CRANKCASE HEATERS IN HVAC SYSTEMS. IT INCLUDES STEP-BY-STEP WIRING INSTRUCTIONS, TROUBLESHOOTING TIPS, AND DETAILED DIAGRAMS TO HELP TECHNICIANS AND DIY ENTHUSIASTS. THE GUIDE ALSO COVERS COMMON WIRING CONFIGURATIONS AND SAFETY PRECAUTIONS FOR INSTALLATION AND MAINTENANCE.

2. *HVAC ELECTRICAL SYSTEMS: WIRING AND TROUBLESHOOTING CRANKCASE HEATERS*

FOCUSING ON THE ELECTRICAL ASPECTS OF HVAC COMPONENTS, THIS BOOK PROVIDES PRACTICAL KNOWLEDGE ON WIRING CRANKCASE HEATERS. IT SIMPLIFIES COMPLEX WIRING CONCEPTS WITH CLEAR DIAGRAMS AND DIAGNOSTIC PROCEDURES. READERS WILL LEARN HOW TO IDENTIFY WIRING FAULTS, PERFORM REPAIRS, AND ENSURE OPTIMAL HEATER PERFORMANCE IN REFRIGERATION SYSTEMS.

3. *UNDERSTANDING CRANKCASE HEATERS: WIRING DIAGRAMS AND APPLICATIONS*

THIS TITLE BREAKS DOWN THE THEORY BEHIND CRANKCASE HEATERS AND THEIR ROLE IN PROTECTING COMPRESSORS FROM REFRIGERANT MIGRATION. IT PRESENTS MULTIPLE WIRING DIAGRAMS TAILORED FOR DIFFERENT HVAC MODELS AND SYSTEM TYPES. THE BOOK IS IDEAL FOR BOTH BEGINNERS AND EXPERIENCED TECHNICIANS SEEKING TO ENHANCE THEIR UNDERSTANDING OF CRANKCASE HEATER INSTALLATIONS.

4. *PRACTICAL WIRING SOLUTIONS FOR CRANKCASE HEATERS IN REFRIGERATION SYSTEMS*

DESIGNED AS A HANDS-ON MANUAL, THIS BOOK OFFERS PRACTICAL WIRING SOLUTIONS TAILORED TO VARIOUS CRANKCASE HEATER MODELS. IT ADDRESSES COMMON CHALLENGES FACED DURING INSTALLATION AND MAINTENANCE, SUPPORTED BY CLEAR, ANNOTATED WIRING DIAGRAMS. THE CONTENT ALSO EMPHASIZES SAFETY STANDARDS AND REGULATORY COMPLIANCE FOR ELECTRICAL WIRING IN REFRIGERATION.

5. *ELECTRICAL WIRING FUNDAMENTALS FOR HVAC TECHNICIANS: CRANKCASE HEATERS EXPLAINED*

AIMED AT HVAC APPRENTICES AND PROFESSIONALS, THIS BOOK COVERS THE FUNDAMENTALS OF ELECTRICAL WIRING WITH A SPECIAL FOCUS ON CRANKCASE HEATERS. IT EXPLAINS ELECTRICAL PRINCIPLES, WIRING COMPONENTS, AND DIAGRAM READING

SKILLS ESSENTIAL FOR ACCURATE INSTALLATIONS. THE BOOK ALSO INCLUDES TROUBLESHOOTING EXERCISES TO BUILD CONFIDENCE IN DIAGNOSING WIRING ISSUES.

6. CRANKCASE HEATER WIRING AND CONTROL STRATEGIES FOR ENERGY EFFICIENCY

THIS BOOK EXPLORES ADVANCED WIRING AND CONTROL TECHNIQUES TO OPTIMIZE CRANKCASE HEATER OPERATION AND IMPROVE ENERGY EFFICIENCY. IT DISCUSSES SMART WIRING CONFIGURATIONS, PROGRAMMABLE CONTROLS, AND INTEGRATION WITH MODERN HVAC SYSTEMS. READERS WILL GAIN INSIGHTS INTO REDUCING ENERGY CONSUMPTION WHILE MAINTAINING COMPRESSOR PROTECTION.

7. STEP-BY-STEP CRANKCASE HEATER WIRING FOR HVAC MAINTENANCE PROFESSIONALS

FOCUSED ON MAINTENANCE, THIS GUIDE PROVIDES DETAILED STEP-BY-STEP INSTRUCTIONS FOR WIRING AND REWIRING CRANKCASE HEATERS. IT INCLUDES CHECKLISTS, WIRING DIAGRAMS, AND SAFETY TIPS TO ENSURE RELIABLE SYSTEM PERFORMANCE. THE BOOK IS A VALUABLE RESOURCE FOR TECHNICIANS AIMING TO MINIMIZE DOWNTIME DURING ROUTINE SERVICING.

8. COMPREHENSIVE TROUBLESHOOTING OF CRANKCASE HEATER WIRING ISSUES

THIS TROUBLESHOOTING MANUAL ADDRESSES COMMON AND COMPLEX WIRING PROBLEMS ENCOUNTERED WITH CRANKCASE HEATERS. IT PROVIDES DIAGNOSTIC FLOWCHARTS, FAULT CODES, AND REPAIR TECHNIQUES TO QUICKLY IDENTIFY AND FIX WIRING FAULTS. THE BOOK ENHANCES THE TECHNICIAN'S ABILITY TO MAINTAIN SYSTEM RELIABILITY UNDER VARIOUS OPERATING CONDITIONS.

9. INSTALLATION AND WIRING OF CRANKCASE HEATERS IN COMMERCIAL HVAC SYSTEMS

TARGETING COMMERCIAL HVAC APPLICATIONS, THIS BOOK COVERS THE SPECIFIC REQUIREMENTS FOR INSTALLING AND WIRING CRANKCASE HEATERS IN LARGE-SCALE REFRIGERATION AND AIR CONDITIONING UNITS. IT DISCUSSES WIRING STANDARDS, SAFETY REGULATIONS, AND BEST PRACTICES FOR COMMERCIAL SETTINGS. THE DETAILED DIAGRAMS AND CASE STUDIES HELP PROFESSIONALS MANAGE COMPLEX INSTALLATIONS EFFICIENTLY.

Crankcase Heater Wiring Diagram

Find other PDF articles:

<https://staging.devenscommunity.com/archive-library-401/files?dataid=cSN07-8480&title=i-90-south-dakota-construction.pdf>

crankcase heater wiring diagram: ,

crankcase heater wiring diagram: Technical Manual United States Department of the Army, 1953

crankcase heater wiring diagram: Air Conditioning Service Guide 2nd Edition Michael Prokup, 2021-09-01 Now in its Second Edition, this training manual was written by industry renowned presenter and author, Michael Prokup. This e-book is a comprehensive reference for servicing R-22/R-410A residential split air conditioning systems and is a must have for every student and service technician! Step-by-step service procedures and quick reference diagrams will help guide technicians through troubleshooting and service. 168 pages and fully illustrated. Copyright 2022 Topics covered include: Mechanical Refrigeration Cycle Basics Refrigerants and Oils Superheat Subcooling and Condensers Refrigerant Piping Charging Diagnosing Refrigeration Circuit Problems High Voltage Circuit Compressors ECM Blower Motors PSC Motors Air Volume

crankcase heater wiring diagram: Operator, Organizational, Direct Support, General Support, and Depot Maintenance Manual , 1989

crankcase heater wiring diagram: Air conditioning and Refrigeration Repair Made Easy Hooman Gohari, 2009-10-19 This comprehensive book has been developed to quickly train an average person for the vast commercial and residential refrigeration and air-conditioning market

within a short period of time. It provides all the technical knowledge needed to start a successful refrigeration and air-conditioning business anywhere in the world.

crankcase heater wiring diagram: Operator, Organizational, DS, and GS Maintenance Manual , 1975

crankcase heater wiring diagram: *1973-74 ASTM Manual for Rating Motor, Diesel and Aviation Fuels* American Society for Testing and Materials, 1973

crankcase heater wiring diagram: Heat Pump Operation, Installation, Service Randy F. Petit, Sr., Turner L. Collins, Esco Institute, 2011-05-01 This program is designed to provide students and technicians with a comprehensive overview of the heat pump system, its operation, and principles. Heat Pumps; Operation, Installation, and Service is designed to provide the reader with a comprehensive overview of heat pump systems. The manual covers basic principles of operation, system components, air flow, defrost methods, balance point, auxiliary electric heat, electrical control wiring, refrigerant piping, installation, refrigerant charging, troubleshooting, dual fuel systems, and an introduction to geothermal systems. The intent of the book is to offer students and technicians information to build upon, in order to enhance their knowledge of the air conditioning and heating field, and more specifically, heat pumps. Before installing or servicing a heat pump system, the technician must have proper training and knowledge of air conditioning/refrigeration theory, principles and operation. With today's energy demands and costs soaring, there is a tremendous need for highly efficient equipment. These systems pose new demands for installers and service technicians. New heat pump systems with single, dual, and variable capacity are being sold which requires trained technicians with the ability to install, service, and maintain this equipment.

crankcase heater wiring diagram: Air Force Manual United States. Department of the Air Force, 1955

crankcase heater wiring diagram: Operator's, Organizational, Direct Support, and General Support Maintenance Manual , 1989

crankcase heater wiring diagram: Operator, Organizational, Direct Support and General Support Maintenance Manual , 1987

crankcase heater wiring diagram: Handbook of Air Conditioning System Design Carrier Corporation. Carrier Air Conditioning Company, 1965

crankcase heater wiring diagram: Electricity for the HVACR Technician CDX Learning Systems, 2018-08-02 Electricity for the HVACR Technician introduces foundational concepts in HVACR electrical systems, guiding students through basic system design and construction to troubleshooting for complex circuits and devices. Combining conceptual electrical knowledge with practical, step-by-step techniques, it equips new technicians with the skills and knowledge necessary to service and repair commercial and residential HVACR systems.

crankcase heater wiring diagram: Operator, Organizational, DS, GS, and Depot Maintenance Manual , 1990

crankcase heater wiring diagram: Operator, Organizational, Direct Support and General Support Manual , 1982

crankcase heater wiring diagram: Modern Refrigeration and Air Conditioning Andrew Daniel Althouse, Carl Harold Turnquist, Alfred F. Bracciano, 1982 Covers fundamentals, principles and service for all types of refrigeration and air conditioning systems. Practical applications in all branches, including solar energy and heat pumps. It is a book of encyclopedic proportions explaining each part of the system and how to diagnose and remedy trouble. Special emphasis on basics of electricity, magnetism and operating principles of electric motors.

crankcase heater wiring diagram: Cold Storage Warehouses United States. Department of the Air Force, 1955

crankcase heater wiring diagram: Student Workbook , 1985

crankcase heater wiring diagram: Manuals Combined: 150+ U.S. Army Navy Air Force Marine Corps Generator Engine MEP APU Operator, Repair And Parts Manuals , Over 36,000 total pages Just a SAMPLE of the CONTENTS by File Number and TM Number:: 013511

TM 5-6115-323-24P 4 GENERATOR SET, GASOLINE ENGINE DRIVEN, SKID MOUNTED, TUBULAR FRAME, 1.5 K SINGLE PHASE, AC, 120/240 V, 28 VDC (LESS ENGINE) DOD MODELS MEP-015A, 60 HZ (NSN 6115-00-889-1446) AND (DOD MODEL MEP-025A) 28 VDC (6115-00-017-8236) {TO 35C2-3-385-4; SL 4-07609A/07610A} 013519 TM 5-6115-329-25P 1 GENERATOR SET, GASOLINE ENGINE DR (LESS ENGINE) 0.5 KW, AC, 120/240 V, 60 HZ, 1 PHASE (DOD MODEL (FSN 6115-923-4469); 400 HZ (MODEL MEP-019A) (6115-940-7862) AN DC (MODEL MEP-024A) (6115-940-7867) {TO 35C2-3-440-14} 013537 TM 5-6115-457-12 7 GENERATOR SET, ENGINE DRIVEN, TACTICAL, SKID MTD; 100 KW, 3 PHASE, 4 WIRE, 120 240/416 V (DOD MODELS MEP-007A), UTILITY CLASS, 50/60 HZ (NSN 6115-00-133-9101), (MODEL MEP-106A) PRECISE CLASS, 50/60 H (6115-00-133-9102), (MODEL MEP-116A) PRECISE CLASS, 400 KW (6115-00-133-9103) INCLUDING OPTIONAL KITS (MODEL MEP-007 AWF) WINTERIZATION KIT, FUEL BURNING (6115-00-463-9082), (MEP-007AWE WINTERIZATION KIT, ELECTRIC (6115-00-463-9084), (MODEL MEP-007A DUMMY LOAD KIT (6115-00-463-9086) AND (MODEL MEP-007AWM) WHEEL 013538 TM 5-6115-457-34 12 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID 100 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 V (DOD MODELS MEP0 UTILITY CLASS, 50/60 HZ (NSN 6115-00-133-9101); (MODEL MEP106A) CLASS, 50/60 HZ (6115-00-133-9102) AND (MODEL MEP116A), PRECISE 400 HZ (6115-00-133-9103); INCLUDING OPTIONAL KITS (DOD MODELS MEP007AWF) WINTERIZATION KIT, FUEL BURNING (6115-00-463-9082); MEP007AWE) WINTERIZATION KIT, ELECTRIC (6115-00-463-9084); (MOD MEP007ALM) DUMMY LOAD KIT (6115-00-463-9086) AND (MODEL MEP007A MOUNTING KIT (6 013540 TM 5-6115-458-24P 9 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL, SKID MTD., 2 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 VOLTS, DOD MODELS MEP009A UTILITY CLASS, 50/60 HZ (NSN 6115-00-133-9104) AND MODEL MEP108A PRECISE CLASS, 50/60 HZ (6115-00-935-8729) INCLUDING OPTIONAL K DOD MODELS MEP009AWF, WINTERIZATION KIT, FUEL BURNING (6115-00-403-3761), MODEL MEP009AWE, WINTERIZATION KIT, ELECTRIC (6115-00-489-7285) 013545 TM 5-6115-465-12 19 GENERATOR DIESEL ENGINE DRIVEN, TACTICAL SKID MTD, 30 KW, 3 PHASE, 4 WIRE 120/208 AND 240/416 V (DOD MODEL MEP-005A), UTILITY CLASS, 50/6 (NSN 6115-00-118-1240), (MODEL MEP-104A), PRECISE CLASS, 50/60 (6115-00-118-1247), (MODEL MEP-114A), PRECISE CLASS, 400 HZ (6115-00-118-1248) INCLUDING AUXILIARY EQUIPMENT (DOD MODEL MEP WINTERIZATION KIT, FUEL BURNING (6115-00-463-9083), (MODEL MEP- WINTERIZATION KIT, ELECTRIC (6115-00-463-9085), (MODEL MEP-005A LOAD BANK KIT (6115-00-463-9088) AND (MODEL MEP-005AWM), WH 013547 TM 5-6115-465-34 12 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTIC SKID MTD, 30 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 V (DOD MO MEP-005A), UTILITY, 50/60 HZ (NSN 6115-00-118-1240), (MODEL MEP-104A), PRECISE, 50/60 HZ (6115-00-118-1247), (MODEL MEP-114 PRECISE, 50/60 HZ (6115-00-118-1248) INCLUDING OPTIONAL KITS (MODEL MEP-005AWF) WINTERIZATION KIT, FUEL BURNING (6115-00-463 (MODEL MEP-005AWE) WINTERIZATION KIT, ELECTRIC (6115-00-463-908 (MODEL MEP-005ALM) LOAD BANK KIT (6115-00-463-9088) (MODEL MEP- WHEEL MOUNTING KIT (6115-00 013548 TM 5-6115-545-12 18 GENERATOR DIESEL ENGINE DRIVEN, TACTICAL SKID MTD., 60 KW, 3 PHASE, 4 WIR 120/208 AND 240/416 VOLTS, DOD MODEL MEP-006A, UTILITY CLASS, 5 (NSN 6115-00-118-1243) DOD MODEL MEP-105A, PRECISE CLASS, 50/60 (6115-00-118-1252) DOD MODEL MEP-115A, PRECISE CLASS, 400 HZ (6115-00-118-1253) INCLUDING OPTIONAL KITS, DOD MODEL MEP006AWF WINTERIZATION KIT, FUEL BURNING (6115-00-407-8314) DOD MODEL MEP006AWE, WINTERIZATION KIT, ELECTRIC (6115-00-455-7693) DOD M MEP006ALM, LOAD BANK KIT (6115-00-407-8322) DOD MODEL MEP006 013550 TM 5-6115-545-34 12 INTERMEDIATE (FIELD) (DIRECT AND GENERAL SUPPORT) AND DEPOT MAINTENANCE MANUAL FOR GENERATOR SET, DIESEL ENGINE DRIVEN, TAC SKID MTD., 60 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 VOLTS DOD MODELS MEP-006A, UTILITY CLASS, 50/60 HZ (FSN 6115-118-1243 MEP-105A, PRECISE CLASS, 50/60 HZ (6115-118-1252) AND MEP-115A, PRECISE CLASS, 400 HZ (6115-118-1253) {TO 35C2-3-444-2; NAVFAC P-8-626-34; TM 00038G-35} 015378 TM

5-6115-323-14 10 GENERATOR GASOLINE ENGINE DRIVEN, SKID MOUNTED, TUBULAR FRAME, 1.5 KW, SI PHASE, AC, 120/240 V, 28 V, DC (LESS ENGINE) (DOD MODELS MEP-01 60 HZ (NSN 6115-00-889-1446) AND (MODEL MEP-025A) 28 V DC (6115-00-017-8236) {TO 35C2-3-385-1} 015380 TM 5-6115-332-24P 3 GENERATOR GASOLINE ENGINE: AIR COOLED, 5 KW, AC, 120/240 V, SINGLE PHASE; 120/208 V, 3 PHASE, SKID MOUNTED, TUBULAR FRAME (LESS ENGINE) M DESIGN: 60 HZ (DOD MODEL MEP-017A) (NSN 6115-00-017-8240); 400 (DOD MODEL MEP-022A) (6115-00-017-8241) {TO 35C2-3-424-24} 020611 LO 5-6115-457-12 GENERATOR SET, DIESEL ENGINE DRIVEN; SKID MTD, 100 KW, 3 PHASE, 120/208 AND 240/416 V (DOD MODELS MEP-007A), UTILITY CLASS, 50/ (NSN 6115-00-133-9101); (MODEL MEP-106A) PRECISE CLASS, 50/60 H (6115-00-133-9102) AND (MODEL MEP-116A), PRECISE CLASS, 400 HZ (6115-00-133-9103) 020612 LO 5-6115-458-12 GENERATOR SET, DIESEL ENGINE DRIVEN, SKID MTD, 200 KW, 3 PHASE, 4 WIRE, 120/208/416 VOLTS, DOD MODELS MEP-009A, UTILITY CLASS, 50/60 HERTZ (NSN 6115-00-133-9104), MEP-108A, PRECISE CLASS, 50 HERTZ (6115-00-935-8729) {LO 07536A-12} 020614 LO 5-6115-465-12 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL, SKID MOUNTED, 30 3 PHASE, 4 WIRE, 120/206 AND 240/416 V (DOD MODEL MEP-055A), UT CLASS, 50/60 HZ (NSN 6115-00-118-1240); (MODEL MEP 104A), PRECI CLASS, 50/60 HZ (6115-00-118-1247) AND (MODEL 114A) PRECISE CLA 400 HZ (6115-00-118-1248) 025150 TM 5-6115-271-14 12 GENERATOR SET, GASOLINE ENGINE DRIVEN, S MTD, TUBULAR FRAME, 3 KW, 3 PHASE, AC, 120/208 AND 120/240 V, 2 DC (LESS ENGINE) DOD MODEL MEP-016A, 60 HZ (NSN 6115-00-017-823 MODEL MEP-016C 60 HZ (6115-00-143-3311) MODEL MEP-021A 400 HZ (6115-00-017-8238) MODEL MEP-021C 400 HZ (6115-01-175-7321) MODEL MEP-026A DC HZ (6115-00-017-8239) MODEL MEP-026C 28 V DC (6115-01-175-7320) {TO 35C2-3-386-1; TM 05926A-14; NAVFAC P-8-6 025151 TM 5-6115-271-24P 3 GENERATOR SET, GASOLINE ENGINE DRIVEN, SKID MOUNTED, TUBULA FRAME, 3 KW, 3 PHASE, AC; 120/208 AND 120/240 VOLTS, 28 VDC (LE ENGINE) (DOD MODEL MEP-016A) 60 HERTZ (NSN 6115-00-017-8237) (MEP-021A) 400 HERTZ (6115-00-017-8238) (MEP-026A) 28 VDC HERTZ (6115-00-017-8239) (MEP-016C) 60 HERTZ (6115-01-143-3311) (MEP- 400 HERTZ (6115-01-175-7321) (MEP-026C) 28 VDC HERTZ (6115-01-175-7320) {TO 35C2-3-386-4; SL-4-05926A} 032507 TM 5-6115-275-14 10 GENERATOR SET, GASOLINE ENGINE DRIVEN, SKID MOUNTED, TUBULAR FRAME, 10 KW, AC, 120/208V PHASE, AND 120/240V, SINGLE PHASE, LESS ENGINE: DOD MODELS MEP- HZ, (NSN 6115-00-889-1447) AND MEP-023A, 400 HZ (6115-00-926-08 {NAVFAC P-8-615-14; TO 35C2-3-452-1} (THIS ITEM IS INCLUDED ON EM 0086, EM 0088 & EM 0127) 032508 TM 5-6115-275-24P 5 GENERATOR, GASOLINE ENGINE DRIVEN, SKID MOUNTED, TUBULAR FRAME, 10 KW, AC, 120/208 V, 3 PHASE AND 120/240 V, SINGLE PHASE (LESS ENGINE); D MEP-018A, UTILITY CLASS, 60 HZ (NSN 6115-00-889-1447) AND MEP-0 PRECISE CLASS, 400 HZ (6115-00-926-0843) {NAVFAC P8-615-24P; TO 35C2-3-452-4} (THIS ITEM IS INCLUDED ON EM 0086, EM 0088 & EM 0127) 032551 TM 5-6115-584-12 11 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MTD, 5 KW, 1 PHASE, 2 WIRE; 1 PHASE, 3 WIRE; 3 PHASE, 4 WIRE, 120, 120/240 AND 120/208 V (DOD MODEL MEP-002A) UTILITY CLASS, 60 HZ (NSN 6115-00-465-1044) {NAVFAC P-8-622-12; TO 35C2-3-456-1; TM 05682C-12} 032640 TM 5-6115-585-12 12 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MTD, 10 KW, 1 PHASE, 2 WIRE 1 PHASE, 3 WIRE AND 3 PHASE, 4 WIRE; 120, 120/240 AND 120/208 V (DOD MODEL MEP-003A) UTILITY CLASS, 60 HZ (NSN 6115-00-465-1030 AND (MODEL MEP-112A), UTILITY CLASS, 400 HZ (6115-00-465-1027) {NAVFAC P-8-623-12; TO 35C2-3-455-1; TM-05684C/05685B-12} 032781 TM 5-6115-584-34 8 GENERATOR SET, DIESEL ENGINE DRIVEN, TAC SKID MOUNTED, 5 KW, 1 PHASE, 2 WIRE, 1 PHASE, 3 WIRE, 3 PHASE, 120, 120/240 AND 120/208 V (DOD MODEL MEP-002A), UTILITY CLASS, (NSN 6115-00-465-1044) {NAVFAC P-8-622-34; TO 35C2-3-456-2; TM 0568C-34} 032936 TM 5-6115-329-14 4 GENERATOR SET GASOLINE ENGINE DRIVEN, 0.5 KW (LESS ENGINE) (DOD MODEL MEP-014 UTILITY CLASS, 60 HZ) (NSN 6115-00-923-4469), (DOD MODEL MEP-01 UTILITY CLASS, 400 HZ (6115-00-940-7862) AND (DOD MODEL MEP-024 UTILITY CLASS, 28 VDC (6115-00-940-7867) {TO 35C2-3-440-1}

033374 TM 5-6115-332-14 10 GENERATOR SET, TAC GASOLINE ENGINE: AIR COOLED, 5 KW, AC, 120/240 V, SINGLE PHASE, V, 3 PHASE, SKID MOUNTED, TUBULAR FRAME (LESS ENGINE) (MILITARY DOD MODEL MEP-017A), UTILITY, 60 HZ (NSN 6115-00-017-8240) AND MODEL MEP-022A), UTILITY, 400 HZ (6115-00-017-8241) {NAVFAC P-8-614-14; TO 35C2-3-424-1} 033750 TM 5-6115-585-34 9 GENERATOR SET, DIESEL ENGINE DRIVEN, TAC SKID MOUNTED, 10 KW, 1 PHASE, 2 WIRE, 1 PHASE, 3 WIRE, 3 PHASE, 4 WIRE, 120, 120/240 AND 120/208 VOLTS (DOD MODEL MEP-003A), UT CLASS, 60 HZ (NSN 6115-00-465-1030) {NAVFAC P-8-623-12; TO 35C2-3-455-2; TM-05684C/05685B-34} 034072 TM 5-6115-585-24P 5 GENERATOR SET, DIESEL ENGINE DRIVEN, TA SKID MTD, 10 KW, 1 PHASE, 2 WIRE; 1 PHASE, 3 WIRE; 3 PHASE, 4 W 120, 120/240 AND 120/208 V (DOD MODELS 003A), UTILITY CLASS, 60 (NSN 6115-00-465-1030) AND (MODEL MEP-112A), UTILITY CLASS, 400 (6115-00-465-1027) {NAVFAC P-8-623-24P; TO 35C2-3-455-4; SL-4-05684C/06585B} 040180 TM 5-6115-584-12-HR HAND RECEIPT MANUAL COVERING END ITEM/COMPONENTS OF END ITEM (C BASIC ISSUE ITEMS (BII), AND ADDITIONAL AUTHORIZATION LIST (AAL) GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MTD, 5 KW, 1 WIRE; 1 PH, 3 WIRE; 3 PH, 4 WIRE, 120, 120/240 AND 120/208 V (D MEP-002A) UTILITY CLASS, 60 HZ (NSN 6115-00-465-1044) 040833 TM 5-6115-458-12-HR HAND RECEIPT MANUAL COVERING THE END ITEM/COMPONENTS OF END ITE BASIC ISSUE ITEMS (BII), AND ADDITIONAL AUTHORIZATION LIST (AA) GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL, SKID MOUNTED, 20 3 PHASE, 4 WIRE, 120/208 AND 240/416 V (DOD MODEL MEP-009A), UT CLASS, 50/60 HZ (NSN 6115-00-133-9104) AND (DOD MODEL MEP-108A) PRECISE CLASS, 50/60 HZ (6115-00-935-8729) 040843 TM 5-6115-593-34 GENERATOR SET, DIESEL ENGINE DRIVEN, TAC SKID MTD, 500 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 VOLTS DOD MODEL, MEP-029A, CLASS UTILITY, 50/60 HZ, (NSN 6115-01-030- DOD MODEL, MEP-029B, CLASS UTILITY, 50/60 HZ, (6115-01-318-6302 INCLUDING OPTIONAL KITS DOD MODEL, MEP-029AHK, HOUSING KIT, (6115-01-070-7550), DOD MODEL, MEP-029ACM, AUTOMATIC CONTROL MO (6115-01-275-7912) DOD MODEL, MEP-029ARC, REMOTE CONTROL MODULE (6110-01-070-7553) DOD MODEL, MEP-029ACC, REMOTE CONTROL CABLE, (6110-01-087-4127) {NAVFAC P-8 041070 TM 5-6115-593-12 GENERATOR SET, ENGINE DRIVEN, TACTICAL SKID MTD, 500 KW, 3 PHASE, 4 WIRE; 120/ 240/416 VOLTS DOD MODEL MEP-029A; CLASS UTILITY, HERTZ 50/60; (NSN 6115-01-030-6085); MEP-029B; UTILITY; 50/60; (6115-01-318- INCLUDING OPTIONAL KTS DOD MODELS MEP-029AHK; NOMENCLATURE HOUS (6115-01-070-7550) MEP-029ACM; AUTOMATIC CONTROL MODULE; (6115-01-275-7912); MEP-029ARC, REMOTE CONTROL MODULE, (6110-01-070-7553); MEP-029ACC, REMOTE CONTROL CABLE (6110-01-087-4127) {TO 35C2-3-463-1} 041338 LO 55-1730-229-12 POWER UNIT, AVIATION, MULTI-OUTPUT GTED ELECTRICAL, HYDRAULIC, PNEUMATIC (AGPU), WHEEL MOUNTED, SELF-PROPELLED, TOWABLE DOD MODEL-MEP-360A, CLASS-PRECISE, HERTZ-400, (NSN 1730-01-144-1897 042791 TM 5-6115-457-12-HR HAND RECEIPT MANUAL COVERING THE BASIC ISSUE ITEMS (BII) FOR GE SET, DIESEL ENGINE DRIVEN, TACTICAL, SKID MTD; 100 KW, 3 PHASE, 120/208 AND 240/416 V (DOD MODELS MEP007A), UTILITY CLASS, 50/6 (NSN 6115-00-133-9101), (MODEL MEP-106A), PRECISE CLASS, 50/60 (6115-00-133-9102) AND (MODEL MEP116A) PRECISE CLASS, 400 HZ (6115-00-133-9103) 043437 TM 5-6115-593-24P 1 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MOUNTED, 500 KW, 3 PHA 4 WIRE; 120/208 AND 240/416 VOLTS DOD MODEL MEP-029A UTILITY CL 50/60 HZ (NSN 6115-01-030-6085) MEP-029B UTILITY CLASS, 50/60 (6115-01-318-6302) INCLUDING OPTIONAL KITS DOD MODEL MEP-029AHK HOUSING KIT (6115-01-070-7550) MEP-029ACM AUTOMATIC CONTROL MOD (6115-01-275-7912) MEP-029ARC REMOTE CONTROL MODULE (6110-01-070-7553) MEP-029ACC REMOTE CONTROL CABLE (6110-01-087 {NAVFAC P-8-631-24P; TO 35C2-3-463-4} 044703 TM 5-6115-545-12-HR HAND RECEIPT MANUAL COVERING COMPONENTS OF END ITEM (COEI), BAS ITEMS (BII), AND ADDITIONAL AUTHORIZATION LIST (AAL) FOR GENERA DIESEL ENGINE DRIVEN, TACTICAL SKID MTD, 60 KW, 3 PHASE, 4 WIRE 120/208 AND 240/416 V (DOD MODELS MEP-006A) UTILITY CLASS, 50/6 (NSN 6115-00-118-1243),

(MODEL MEP-105A) PRECISE CLASS, 50/60 H (6115-00-118-1252) AND (MODEL MEP-115A) PRECISE CLASS, 400 HZ (6115-00-118-1253) 050998 TM 5-6115-600-12 8 GENERATOR DIESEL ENGINE DRIVEN, TACTICAL SKID MTD, 100 KW, 3 PHASE, 4 WIR 120/208 AND 240/416 V (DOD MODEL MEP-007B) CLASS UTILITY, 50/60 (NSN 6115-01-036-6374) INCLUDING OPTIONAL KITS, DOD MODEL MEP00 WINTERIZATION KIT, FUEL BURNING AND MEP007BWE WINTERIZATION KIT ELECTRIC 051007 TM 5-6115-600-24P 4 GENERATOR SET, DIESEL ENGINE DRIVEN, 100 KW, 3 PHASE, 4 WIRE, 120/208 AND VOLTS (DOD MODEL MEP-007B), UTILITY CLASS, 50/60 HZ (NSN 6115-01-036-6374) INCLUDING OPTIONAL KITS, DOD MODEL MEP007BWF, WINTERIZATION KIT, FUEL BURNING AND MEP007BWE WINTERIZATION KIT, ELECTRIC {TO 35C2-3-442-14; NAVFAC P-8-628-24P; SL-4-07464B} 057268 LO 5-6115-600-12 GENERATOR SET, DIESEL ENGINE DRIVEN; TACTICAL, SKID MTD, 100 KW PHASE, 4 WIRE; 120/208 AND 240/416 V (DOD MODEL MEP007B), CLASS UTILITY, 50/60 HZ (NSN 6115-01-036-6374) 057513 LO 5-6115-604-12 GENERATOR SET, DIESEL ENGINE DRIVEN, AIR TRANSPORTABLE; SKID MT 750 KW, 3 PHASE, 4 WIRE; 2400/4160 AND 2200/3800 VOLTS (DOD MOD MEP208A) CLASS PRIME UTILITY, HZ 50/60 (NSN 6115-00-450-5881) {LI 6115-12/9} 060183 TM 5-6115-612-24P 6 GENERATOR SET, AVIATION, GAS TURBINE ENGINE DRIVEN, INTEGRA TRAILER MOUNTED, 10KW, 28 VOLTS MODEL MEP-362A, PRECISE, DC (NSN 6115-01-161-3992) {TM 6115-24P/1; AG-320B0-IPE-000; TO 35C2-3-471-4} 060188 TM 5-6115-612-34 4 GENERATOR SET, AVIATION, GAS TURBINE ENG DRIVEN, INTEGRAL TRAILER MOUNTED 10KW 28 VOLTS DOD MODEL MEP 36 PRECISE, DC, (NSN 6115-01-161-3992) {AG-320BO-MME-000; TM 6115- TO 35C2-3-471-2} 060645 LO 5-6115-612-12 AVIATION GENERATOR SET, GAS TURBINE, ENGINE DRIVEN, INTEGRAL TR MOUNTED, 10KW, 28 VOLTS DC DOD MODEL MEP 362A CLASS PRECISE (NSN 6115-01-161-3992) 060921 TM 55-1730-229-34 5 POWER UNIT, AVIATION, MULTI-OUTPUT GTED, ELECTRICAL, HYDRAULIC, PNEUMATIC (AGPU) WHEEL MOUNTED, SELF-PROPELLED, TOWA AC 400HZ, 3PH, 0.8 PF, 115/200V, 30 KW, DC 28VDC 700 AMPS, PNEUMATIC, 60 LBS/MIN. AT 40 PSIG, HYDRAULIC, 15 GPM AT 3300 PS DOD MODEL MEP-360A, CLASS PRECISE, 400 HERTZ, (NSN 1730-01-144- {AG 320A0-MME-000; TO 35C2-3-473-2; TM 1730-34/1} 060922 TM 55-1730-229-12 8 POWER UNIT, AVIATION, MULTI-OUTPUT GTED ELECTRICAL, HYDRAULIC, PNEUMATIC (AGPU) WHEEL MOUNTED, SELF-PROPELLED, TOWABLE, AC 400HZ, 3PH, 0.8 PF, 115/200V, 30 KW, DC 28 VDC 700 AMPS, PNEUMATIC 60 LBS/M AT 40 PSIG, HYDRAULIC 15 GPM AT 3300 PSIG, DOD MODEL MEP-360A, CLASS PRECISE, HERTZ 400, (NSN 1730-01-144-1897) {AG 320A0-OMM-000; TO 35C2-3-473-1; TM 1730-12/1} 061758 LO 5-6115-614-12 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MTD. 200 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 VOLTS MODEL MEP009B, UTILI 50/60 HERTZ, (NSN 6115-01-021-4096) 061772 LO 5-6115-622-12 GENERATOR SET, DIESEL ENGINE-DRIVEN, WHEEL MOUNTED 750-KW, 3-PH 4-WIRE, 2200/3800 AND 2400/4160 VOLTS CUMMINS ENGINE COMPANY IN MODEL KTA-2300G-2 DOD MODEL MEP-012A; CLASS UTILITY; HERTZ 062762 LO 5-6115-615-12 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MOUNTED, 3 K MODEL 016B; CLASS UTILITY MODE 50/60 HZ (NSN 6115-01-150-4140); DOD MODEL MEP-021B; CLASS UTILITY; MODE 400 HZ (6115-01-151-812 DOD MODEL MEP-026B; CLASS UTILITY; MODE 28 VDC (6115-01-150-036 {LI 05926B/06509B-12/5; P-8-646-LO} 064310 TM 5-6115-626-14&P 2 POWER UNIT PU-406B/M (NSN 6115-00-394-9576) MEP-005A 30 KW 60 HZ GENERATOR SET M200A1 2-WHEEL4-TIRE, MODIFIED TRAILER 064390 TM 5-6115-632-14&P 5 POWER UNIT PU-753/M (NSN 6115-00-033-1 MEP-003A 10 KW 60 HZ GENERATOR SET M116A2 2-WHEEL, 2-TIRE, MODI TRAILER 064392 TM 5-6115-629-14&P 3 POWER PLANT AN/AMJQ-12A (NSN 6115-00-257-1602) (2) MEP-006A 60HZ, GENERATOR SETS (2) M200A1 2-WHEEL, 4-TIRE, MODIFIED TRAIL 064443 TM 5-6115-625-14&P 2 POWER UNIT PU-405A/M (NSN 6115-00-394-9577) MEP-004A 15 KW 60 HZ GENERATOR SET M200A1 2-WHEEL, 4-TIRE, MODIFIED TRAILER (THIS ITEM IS INCLUDED ON EM 0086 & EM 0087) 064445 TM 5-6115-633-14&P 4 POWER PLANT AN/MJQ-18 (NSN 6115-00-033-1398) (2) MEP-003A 1 60 HZ GENERATOR SETS M103A3 2-WHEEL 1 1/2 TON MODIFIED TRAILER 064446 TM

5-6115-628-14&P 4 POWER PLANT AN/MJQ-15 (NSN 6115-00-400-7591) (2) MEP-113A 1 400 HZ GENERATOR SETS, (2) M200A1 2-WHEEL, 4-TIRE, MODIFIED TRA (THIS ITEM IS INCLUDED ON EM 0086) 064542 TM 5-6115-631-14&P 4 POWER PLANT AN/MJQ-16 (NSN 61 15-00-033-1395) (2) MEP-002A 5 KW 60 HZ GENERATOR SETS M103A3 2-WHEEL, 2-TIRE, MODIFIED TRAI 065071 TM 55-1730-229-24P 6 POWER AVIATION, MULTI-OUTPUT GTED ELECTRICAL, HYDAULIC, PNEUMATIC (AG WHEEL MOUNTED, SELF-PROPELLED, TOWABLE AC 400 HZ, 3 PH, 0.8 PF, 115/200V, 30 KW DC 28 VDC 700 AMPS PNEUMATIC 60 LBS/MIN. AT 40 HYDRAULIC 15 GPM AT 3300 PSIG DOD MODEL MEP-360A, CLASS PRECISE 400 HERTZ (NSN 1730-01-144-1897) {TO 35C2-3-473-4; TM 1730-24P/ AG 320A0-IPB-000} 065603 TB 5-6115-593-24 WARRANTY PROGRAM FOR GENERATOR SET DOD MODEL MEP-029A HOUSING K DOD MODEL MEP-029AHK 066727 TM 5-6115-640-14&P 2 POWER AN/MJQ-32 (NSN 6115-01-280-2300) AN/MJQ-33 (6115-01-280-2301) (MEP-701A 3KW 60 HZ ACOUSTIC SUPPRESSION KIT GENERATOR SETS M116 2-WHEEL, 2-TIRE, 3/4-TON MODIFIED TRAILERS 066808 TM 5-6115-627-14&P 2 POWER PLANT AN/MJQ-10A (NSN 6115-00-394-9582); (2) MEP-005A 30 KW 60 HZ GEN SETS; (2) M200A1 2-WHEEL, 4 TIRE MODIFIED TRAILERS 066809 TM 5-6115-630-14&P 4 POWER UNIT, PU-751/M (NSN 6115-00-033-1373) MEP-002A, 5 KW, 60 HZ GENERATOR SET M116A1 2-WHEEL, 2-TIRE, MODIFIED TRAILER 066824 TM 5-6115-465-10-HR 1 HAND RECEIPT MANUAL COVERING END ITEM/COMPONENTS OF END ITEM (C BASIC ISSUE ITEMS, (BII) AND ADDITIONAL AUTHORIZATION LIST (AAL GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MOUNTED, 30K 4 WIRE, 120/208 AND 240/416 VOLTS - MEP-005A, UTILITY, 50/60 HE (NSN 6115-00-118-1240); MEP-104A, PRECISE, 50/60 HERTZ, (6115-00-118-1247): MEP-114A, PRECISE, 400 HERTZ, (6115-00-118- INCLUDING AUXILIARY EQUIPMENT MEP-005AWF WINTERIZATION KIT, FUE BURNING (6115-00-463-9083); MEP-005AWE, WINTERIZATION KIT, ELEC (6115-00 067310 TM 9-6115-650-14&P 1 POWER PLAN AN/MJQ-25 (NSN 6115-01-153-7742) (2) MEP-112A 10 KW 400 HZ GENE SETS M103A3 2-WHEEL, 2-TIRE, MODIFIED TRAILER 067311 TM 9-6115-653-14&P 2 POWER UNIT PU-732/M (NSN 6115-00-260-3082) MEP-113A 15 KW 400 HZ GENERATOR SET M200 2-WHEEL, 4-TIRE, MODIFIED TRAILER 067544 TM 9-6115-652-14&P 1 POWER UNIT PU-760/M (NSN 6115-00-394-9581) MEP-114A 30 KW 400 HZ GENERATOR M200A1 2-WHEEL, 4-TIRE, MODIFIED TRAILER 067632 TM 9-6115-648-14&P POWER UNIT PU-650B/G (NSN 6115-00-258-1622) MEP-006A 60 KW 60 HZ GENERATOR M200A1 2-WHEEL, 4-TIRE, MODIFIED TRAILER 067744 TM 9-6115-646-14&P 1 POWER UNIT PU-495A/G, (NSN 6115-00-394-9575) AND PU-495B/G, (6115-01-134-0 MEP-007A 100 KW, 60 HZ OR MEP-007B, 100 KW, 60 HZ GENERATOR SET M353-2-WHEEL, 2-TIRE MODIFIED TRAILER 067746 TM 9-6115-651-14&P POWER UNIT 707A/M (NSN 6115-00-394-9573) MEP-115A, 60 KW, 400 HZ GENERATOR M200A1, 2-WHEEL, 4-TIRE, MODIFIED TRAILER 067879 TM 9-6115-647-14&P 1 POWER UNIT PU-789/M (NSN 6115-01-208-9827) MEP-114A, 30 KW 400 HZ GENERATOR SET M353 2-WHEEL, 2-TIRE, MODIFIED TRAILER 069601 TM 9-6115-464-10-HR HAND RECEIPT MANUAL COVERING THE END ITEMS/COMPONENTS OF END IT (COEI), BASIC ISSUE ITEMS (BII), AND ADDITIONAL AUTHORIZATION L (AAL) FOR GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MO 15 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 VOLTS DOD MODEL MEP UTILITY CLASS, 50/60 HERTZ (NSN 6115-00-118-1241) DOD MODEL MEP PRECISE CLASS, 50/60 HERTZ (6115-00-118-1245) DOD MODEL MEP-113 PRECISE CLASS, 400 HERTZ (6115-00-118-1244) 069602 LO 9-6115-464-12 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL, SKID MTD, 15KW, 4 WIRE, 120/208 AND 240/416 VOLTS (DOD MODEL MEP 004A) (NSN 6115-00-118-1241); (DOD MODEL MEP 104A) (6115-00-118-1245) (DOD MODEL MEP-113A) (6115-00-118-1244) 069954 TM 9-6115-465-24P 2 GENERATOR SET, DIESEL ENGINE DRIVE TACTICAL SKID MTD. 30KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 V MODELS; MEP-005A, UTILITY, 50/60 HZ, (NSN 6115-00-118-1240), MEP-104A PRECISE, 50/60 HZ, (6115-00-118-1247), MEP-114A, PRECISE, 400 H (6115-00-118-1248), INCLUDING OPTIONAL KITS, DOD MODELS; MEP-00 WINTERIZATION KIT, FUEL BURNING, (6115-00-463-9083), MEP-005-AW WINTERIZATION KIT, ELECTRIC, (6115-00-463-9085), MEP-002-ALM, L BANK KIT,

(6115-00-463-9088), MEP-005-AWM, WHEEL MOUNTING KIT, (6115-00-463-9094) {TO-35C2-3-070096 TM 9-6115-464-24P 1 GENERATOR S DIESEL ENGINE DRIVEN, TACTICAL SKID MTD., 15KW, 3 PHASE, 4 WIRE 120/208 AND 240/416 VOLTS (DOD MODEL MEP-004A) UTILITY CLASS 50/60 HERTZ (NSN 6115-00-118-1241) (DOD MODEL MEP-103A) PRECISE CLASS 50/60 HERTZ (6115-00-118-1245) (DOD MODEL MEP-113A) PRECI CLASS 400 HERTZ (6115-00-118-1244) INCLUDING OPTIONAL KITS (DOD MODEL MEP-005-AWF) WINTERIZATION KIT, FUEL BURNING (6115-00-463 (DOD MODEL MEP-005-AWE) WINTERIZATION KIT, ELECTRIC (6615-00-46 (DOD MODEL MEP-004-ALM) LOAD BANK KIT (6115-00-191-9201 071025 TM 9-6115-641-10 2 GENERATOR SET SKID MOUNTED, TACTICAL QUIET 5 KW, 60 AND 400 HZ MEP-802A (60 HZ) (NSN 6115-01-274-7387) MEP-812A (400 HZ) (6115-01-274-7391) {TO 35C2-3-456-11} 071026 TM 9-6115-642-10 2 GENERATOR SET SKID MOUNTED, TACTICAL QUIE 10 KW, 60 AND 400 HZ MEP-803A (60 HZ) (NSN 6115-01-275-5061) MEP-813A (400 HZ) (6115-01-274-7392) {TO 35C2-3-455-11; TM 09247A/09248A-10/1} 071028 TM 9-6115-643-10 3 GENERATOR SET, SKID MOUNTED, TACTICAL QUI 15 KW, 50/60 AND 400 HZ MEP-804A (50/60 HZ) (NSN 6115-01-274-73 MEP-814A (400 HZ) (6115-01-274-7393) {TO 35C2-3-445-21} 071029 TM 9-6115-644-10 2 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 30 KW, 50/60 AND 400 HZ MEP-805A (50/60 HZ), (NSN 6115-01-274-7389) MEP-815A (400 HZ), (6115-01-274-7394) {TO 35C2-3-446-11; TM 09249A/09246A-10/1} 071030 TM 9-6115-645-10 2 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 60 KW, 50/60 AND 400 HZ MEP-806A (50/60 HZ), (NSN 6115-01-274-7390) MEP-816A (400 HZ), (6115-01-274-7395) {TO 35C2-3-444-11; TM 09244A/09245A-10/1} 071031 LO 9-6115-641-12 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 5 KW, 60 AND 400 HZ MEP-802A TACTICAL QUIET 60 HZ (NSN 6115-01-274-7387) MEP-812A TACTICAL QUIET 400 HZ (6115-01-274-7391) 071032 LO 9-6115-642-12 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 10 KW, 60 AND 400 HZ MEP-803A TACTICAL QUIET 60 HZ (NSN 6115-01-275-5061) MEP-813A TACTICAL QUIET 400 HZ (6115-01-274-7392) 071033 LO 9-6115-643-12 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 15 KW, 50/60/400 HZ MEP-804A TACTICAL QUIET 50/60 HZ (NSN 6115-01-274-7388) MEP-814 TACTICAL QUIET 400 HZ (6115-01-274-7393) 071034 LO 9-6115-644-12 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 30 KW, 50/60 AND 40 MEP-805A TACTICAL QUIET 50/60 HZ (NSN 6115-01-274-7389) MEP-815 TACTICAL QUIET 400 HZ (6115-01-274-7394) {LI 09249A/09246A-12} 071035 LO 9-6115-645-12 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 60 KW, 50/60 AND 40 MEP-806A TACTICAL QUIET 50/60 HZ (NSN 6115-01-274-7390) MEP-816 TACTICAL QUIET 400 HZ (6115-01-274-7395) {LI 09244A/09245A-12} 071036 TB 9-6115-641-24 WARRANTY PROGRAM FOR GENERATOR SET, TACTICAL QUIET 5 KW, 60 AND 400 HZ MEP-802A AND MEP-812A 071037 TB 9-6115-642-24 WARRANTY PROGRAM FOR GENERATOR SET, TACTICAL QUIET 10 KW, 60 AND 400 HZ MEP-803A AND MEP-813A {SI 09247A/09248A-24} 071038 TB 9-6115-643-24 WARRANTY PROGRAM FOR GENERATOR SET, TACTICAL QUIET 15 KW, 50/60 AND 400 HZ MEP-804A AND MEP-814A 071039 TB 9-6115-644-24 WARRANTY PROGRAM FOR GENERATOR SET, TACTICAL QUIET 30 KW, 50/60 AND 400 HZ MEP-805A AND MEP-815A {SI 09249A/09246A-24} 071040 TB 9-6115-645-24 WARRANTY PROGRAM FOR GENERATOR SET, TACTICAL QUIET 60 KW, 50/60 AND 400 HZ MEP-806A AND MEP-816A {SI 09244A/09245A-24} 071541 TM 9-6115-464-12 2 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MTD, 15 KW, 3 PHASE, 4 WIRE, 120/2 AND 240/416 VOLTS DOD MODEL MED-004A UTILITY CLASS 50/60 HERTZ (NSN 6115-00-118-1241) DOD MODEL MEP-103A PRECISE CLASS 50/60 HERTZ (6115-00-118-1245) DOD MODEL MEP-113A PRECISE CLASS 400 HERTZ (6115-00-118-1244) INCLUDING OPTIONAL KITS DOD MODEL MEP-005-AWF WINTERIZATION KIT, FUEL BURNING (6115-00-463-9083) DOD MODEL MEP-005-AWE WINTERIZATION KIT, ELECTRIC (6115-00-463-9085) DOD MODEL MEP-004-ALM LOAD BANK KIT (6115-00-291 071604 TM 9-6115-645-24P GENERATOR SET, TACTICAL QUIET 60KW, 50/60/400 HZ (NSN 6115-01-274-7390) (MEP-806A) (6115-01-274-7395) (MEP-816A) {TO 35C2-3-444-14; TM 09244A/09245A-24P/3} 071605 TM 9-6115-642-24P GENERATOR SET, TACTICAL QUIET 10 KW, 60/400 HZ (NSN 6115-01-275-5061) (MEP-803A) (6115-01-274-7392) (MEP-813A) {TO

35C2-3-455-14; TM 09247A/09248A-24P/3} 071610 TM 9-6115-643-24P GENERATOR SET, TACTICAL QUIET 15KW, 50/60 - 400 HZ (NSN 6115-01-274-7388) (MEP-804A) (6115-01-274-7393) (MEP-814A) {TO 35C2-3-445-24} 071611 TM 9-6115-644-24P GENERATOR SET, TACTICAL QUIET 30KW, 50/60-400 HZ (NSN 6115-01-274-7389) (MEP-805A) (6115-01-274-7394) (MEP-815A) {TO 35C2-3-446-14; TM 09249A/09246A-24P/3} 071613 TM 9-6115-641-24P GENERATOR SET, TACTICAL QUIET 5 KW, 60/400 HZ (NSN 6115-01-274-7387) (MEP-802A) (6115-01-274-7391) (MEP-812A) {TO 35C2-3-456-14} 071713 TM 9-6115-645-24 4 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 60KW, 50/60 AND 400 HZ MEP-806A (50/60 HZ) (NSN 6115-01-274-7390) MEP-816A (400 HZ) (6115-01-274-7395) {TO 35C2-3-444-12; TM 09244A/09245A-24/2} 071748 TM 9-6115-644-24 1 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 30 KW, 50/60 AND 400 HZ MEP-805A (50/60 HZ) (NSN 6115-01-274-7389) MEP-815A (400 HZ) (6115-01-274-7394) {TO 35C2-3-446-12; TM 09249A/09246A-24/2} 071749 TM 9-6115-643-24 4 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 15 KW, 50/60 AND 400 HZ MEP-804A (50/60 HZ) (NSN 6115-01-274-7388) MEP-814A (400 HZ) (6115-01-274-7393) {TO 35C2-3-445-22} 071750 TM 9-6115-642-24 4 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 10 KW, 60 AND 400 HZ MEP-803A (60 HZ) (NSN 6115-01-275-5061) MEP-813A (400 HZ) (6115-01-274-7392) {TO 35C2-3-455-12; TM 09247A/09248A-24/2} 071751 TM 9-6115-641-24 3 GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 5 KW, 60 AND 400 HZ MEP-802A (60 HZ) (NSN 6115-01-274-7387) MEP-812A (400 HZ) (6115-01-274-7391) {TO 35C2-3-456-12} 072239 TM 9-6115-464-34 1 GENERATOR SET, DIESEL ENGINE DRIVEN, TACTICAL SKID MTD., 15 KW, 3 PHASE, 4 WIRE 120/208 AND 240/416 VOLTS DOD MODEL MEP-004A UTILITY CLASS 50/60 HERTZ (NSN 6115-00-118-1241) DOD MODEL MEP 103A PRECISE CLASS 50/60 HERTZ (6115-00-118-1245) DOD MODEL MEP-113A PRECISE CLASS 400 HERTZ (6115-00-118-1244) INCLUDING OPTIONAL KITS DOD MODEL MEP-005AWF WINTERIZATION KIT, FUEL BURNING (6115-00-463-9083) DOD MODEL MEP-005AWE WINTERIZAT KIT, ELECTRIC (6115-00-463-9085) DOD MODEL MEP-004ALM LOAD BANK KIT (6115-00-291-920 073744 TM 9-6115-604-24P 1 GENERATOR SET, DIESEL ENGINE DRIVEN, AIR TRANSPORTABLE SKID MOUNTED, 750KW, 3 PHASE, 4 WIRE, 2400/4160, AND 2200/3800 VOLTS DOD MODEL MEP208A PRIME UTILITY CLASS 50/60 HERTS (NSN 6115-00-450-5881) DOD MODEL 80-1466 REMOTE CONTROL MODULE CLASS (6115-01-150-5284 DOD MODEL 80-7320 SITE REQUIREMENTS MODULE CLASS (6115-01-150-5 {NAVFAC P-8-633-24P} 074040 TM 9-6115-545-24P GENERATOR SET, DIESEL ENGINE DRIVEN, TAC SKID MTD., 60 KW, 3 PHASE, 4 WIRE, 120/208 AND 240/416 VOLTS, D MODELS MEP-006A, UTILITY CLASS, 50/60 H/Z, (NSN 6115-00-118-124 MEP-105A, PRECISE CLASS, 50/60 H/Z, (6115-00-118-1252), MEP-115 PRECISE CLASS, 400 H/Z (6115-00-118-1253); INCLUDING OPTIONAL K DOD MODELS MEP-006AWF, WINTERIZATION FUEL BURNING, (6115-00-407 MEP-006AWE, WINTERIZATION KIT, ELECTRIC, (6115-00-455-7693), ME LOAD BANK KIT, (6115-00-407-8322), AND MEP-006AWM, WHEEL MOUNTI (6115-00-463-9092) {TO 074212 TM 9-6115-604-12 GENERATOR SET, DIESEL DRIVEN, AIR TRANSPORTABLE SKID MTD., 750 KW, 3 PHASE, 4 WIRE, 24 AND 2200/3800 V (DOD MODEL MEP 208A) CLASS PRIME UTILITY, HZ 50 (NSN 6115-00-450-5881) {NAVFAC P-8-633-12} 074896 TM 9-6115-604-34 GENERATOR SET, DIESEL ENGINE DRIVEN, AIR TRANSPORTABLE SKID MTD., 750 KW, 3 PHASE, 4 WIRE, 2400/4160 AND 2200/3800 VOLTS DOD MODEL MEP 208A PRIME UTILITY CLASS 50/60 HERTZ (NSN 6115-00-450-5881) {NAVFAC P-8-633-34} 075027 TM 9-6115-584-24P 1 GENERATOR SET, DIESEL E DRIVEN, TACTICAL SKID MTD 5 KW, 1 PHASE -2 WIRE, 1 PHASE -3 WIR 3 PHASE -4 WIRE, 120, 120/240 AND 120/208 VOLTS (DOD MODEL MEP- UTILITY CLASS, 60 HZ (NSN 6115-00-465-1044) {NAVFAC P-8-622-24P TO 35C2-3-456-4} 077581 TM 9-6115-673-13&P 2KW MILITARY TACTICAL GENERATOR SET 120 VAC, 60 HZ (NSN 6115-01-435-1565) (MEP-531A) (EIC: LKA) (NSN 6115-21-912-0393) (MECHRON) 28 VDC (NSN 6115-01-435-1567) (MEP-501A) (EIC: LKD) (NSN 6115-21-912-0392) (MECHRON) 078167 TM 9-6115-672-14 GENERATOR SET SKID MOUNTED TACTICAL QUIET 60KW, 50/60 AND 400 HZ, MEP-806B (50/60 HZ) (NSN 6115-01-462-0291) EIC: GGW, MEP-816B (400 HZ) (NSN 6115-01-462-0292) EIC: GGX 078443 TM

9-6115-639-13 1 3KW TACTICAL QUIET GENERATOR SET MEP 831A (60 HZ) (NSN 6115-01-285-3012) (EIC: VG6) MEP 832A (400 HZ) (NSN 6115-01-287-2431) (EIC: VN7) 078490 TM 9-6115-671-14 OPERATOR, UNIT, GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 30 KW, 50/60 AND 400 HZ, MEP-805B (50/60 HZ) (NSN 6115-01-461-9335) (EIC: GGU) MEP-815B (400 HZ) (6115-01-462-0290) (EIC: GGV) 078503 TM 9-6115-671-24P GENERATOR SET SKID MOUNTED, TACTICAL QUIET 30 KW, 50/60 AND 400 HZ MEP-805B (50/60 HZ) (NSN 6115-01-461-9335) (EIC: GGU) MEP-815B (400 HZ) (NSN 6115-01-462-0290) (EIC: GGV) 078504 TM 9-6115-672-24P GENERATOR SET, SKID MOUNTED, TACTICAL QUIET 60 KW, 50/60 AND 400 HZ MEP-806B (50/60 HZ) (NSN 6115-01-462-0291) (EIC: GGW) MEP-816B (400 HZ) (NSN 6115-01-462-0292) (EIC: GGX) 078505 TB 9-6115-671-24 WARRANTY PROGRAM FOR GENERATOR SET, TACTICAL QUIET 30KW, 50/60 AND 400 HZ MEP-805B AND MEP-815B PROCURED UNDER CONTRACT DAAK01-96-D-00620 WITH MCII INC 078506 TB 9-6115-672-24 WARRANTY PROGRAM FOR GENERATOR SET, TACTICAL QUIET 30KW, 50/60 AND 400 HZ MEP-806B AND MEP-816B PROCURED UNDER CONTRACT DAAK01-96-D-00620 WITH MCII INC 078523 TM 9-6115-664-13&P 5KW, 28VDC, AUXILIARY POWER UNIT (APU) MEP 952B NSN 6115-01-452-6513 (EIC: N/A) 078878 TM 9-6115-639-23P 3KW TACTICAL QUIET GENERATOR SET MEP 831A (60 HZ) (NSN 6115-01-285-3012) (EIC: VG6) MEP 832A (400 HZ) (NSN 6115-01-287-2431) (EIC: VN7) 079379 TB 9-6115-641-13 WINTERIZATION KIT (NSN 6115-01-476-8973) INSTALLED ON GENERATOR SET, SKID MOUNTED, TACTICAL QUIET, 5KW, 60 AND 400 HZ MEP-802A (600HZ) (6115-01-274-7387) MEP-812A (400HZ) (6115-01-274-7391) 079460 TB 9-6115-642-13 WINTERIZATION KIT (NSN 6115-01-477-0564) (EIC: N/A) INSTALLED ON GENERATOR KIT, SKID MOUNTED, TACTICAL QUIET, 10KW, 60 AND 400 HZ MEP-803A (60HZ) (6115-01-275-0561) MEP-813A (400HZ) (6115-01-274-7392) 079461 TB 9-6115-643-13 WINTERIZATION KIT (NSN 6115-477-0566) INSTALLED ON GENERATOR SET, SKID MOUNTED, TACTICAL QUIET, 15KW, 50/60 AND 400 HZ, MEP-804A (50/60HZ) (6115-01-274-7388) MEP-814A (400HZ) (6115-01-274-7393) 079462 TB 9-6115-644-13 WINTERIZATION KIT (NSN 6115-01-474-8354) (EIC: N/A) INSTALLED ON GENERATOR SET, SKID MOUNTED, 30KW, 50/60 AND 400 HZ MEP-805A (50/60HZ) (NSN 6115-01-274-7389) MEP-815A (400HZ) (NSN 6115-01-274-7394) 079463 TB 9-6115-645-13 WINTERIZATION KIT (NSN 6115-01-474-8344) (EIC: N/A) INSTALLED ON GENERATOR SET, SKID MOUNTED, TACTICAL QUIET, 60KW, 50/60 AND 400 HZ, MEP-806A (50/60HZ) (6115-01-274-7390) MEP-816A (400HZ) (6115-01-274-7395) 080214 TM 9-6115-670-14&P AUXILIARY POWER UNIT, 20KW, 120/240 VAC, 60 HZ, MODEL NO. MEP-903A(SICPS) NSN 6115-01-431-3062 MODEL NUMBER MEP-903B (JTACS) NSN 6115-01-431-3063 MODEL NO MEP-903C9WIN-T) NSN 6115-01-458-5329 (EIC: N/A)

crankcase heater wiring diagram: *Single Cylinder Engine Tests for Evaluating the Performance of Crankcase Lubricants* American Society for Testing and Materials, 1979

Related to crankcase heater wiring diagram

Crankcase - Wikipedia The crankcase often forms the upper half of the main bearing journals (with the bearing caps forming the other half), although in some engines the crankcase completely surrounds the

How does a Crankcase Work? | What is the Function of Crankcase? The crankcase is an enclosed chamber or housing that surrounds and contains the crankshaft of the engine. It's the largest part of the engine but must be designed to be strong and light

What is a Crankcase and What Does it Do? - The Engineering Choice A crankcase is the housing for the crankshaft in a reciprocating internal combustion engine. In most modern engines, the crankcase is integrated into the engine block

Crankcase: Function, Diagram, Parts, Ventilation, Evacuation The upper half of the crankcase is made by the lower portion of the engine block and the lower half of the crankcase is connected to the upper half to form a crankcase cavity

What is a Crankcase? (with pictures) - WikiMotors An intrinsic component of an internal

combustion engine, the crankcase is a drilled metal frame that houses several parts, notably the crankshaft. Its main universal function is to

Crankcase: Definition, Construction, Functions, Types, Advantage Crankcase A crankcase is a fundamental component in internal combustion engines, serving as the housing for the engine's crankshaft, connecting rods, and pistons. It encloses the lower part

What Is The Crankcase In An Engine? Engine Anatomy In essence, the crankcase is a pivotal component of an engine, specifically within the realm of internal combustion engines. Acting as a protective housing, it encloses and

Structure and function of a crankcase (3D animation) What is the purpose of a crankcase? What are the requirements of a crankcase? What is the structure of a crankcase? What material is it made of? Find out in this video

Crankcase: Definition, Function & Engine Role The crankcase is a fundamental component in internal combustion engines, acting as the primary housing for the crankshaft. The crankshaft converts the reciprocating motion of

Understanding Crankcase Function & Symptoms | RepairPal Mounted between the engine block and the oil pan, the crankcase supports the crankshaft, allowing it to spin freely while transmitting power (torque) from the engine

Crankcase - Wikipedia The crankcase often forms the upper half of the main bearing journals (with the bearing caps forming the other half), although in some engines the crankcase completely surrounds the

How does a Crankcase Work? | What is the Function of Crankcase? The crankcase is an enclosed chamber or housing that surrounds and contains the crankshaft of the engine. It's the largest part of the engine but must be designed to be strong and light

What is a Crankcase and What Does it Do? - The Engineering Choice A crankcase is the housing for the crankshaft in a reciprocating internal combustion engine. In most modern engines, the crankcase is integrated into the engine block

Crankcase: Function, Diagram, Parts, Ventilation, Evacuation The upper half of the crankcase is made by the lower portion of the engine block and the lower half of the crankcase is connected to the upper half to form a crankcase cavity

What is a Crankcase? (with pictures) - WikiMotors An intrinsic component of an internal combustion engine, the crankcase is a drilled metal frame that houses several parts, notably the crankshaft. Its main universal function is to

Crankcase: Definition, Construction, Functions, Types, Advantage Crankcase A crankcase is a fundamental component in internal combustion engines, serving as the housing for the engine's crankshaft, connecting rods, and pistons. It encloses the lower

What Is The Crankcase In An Engine? Engine Anatomy In essence, the crankcase is a pivotal component of an engine, specifically within the realm of internal combustion engines. Acting as a protective housing, it encloses and

Structure and function of a crankcase (3D animation) What is the purpose of a crankcase? What are the requirements of a crankcase? What is the structure of a crankcase? What material is it made of? Find out in this video

Crankcase: Definition, Function & Engine Role The crankcase is a fundamental component in internal combustion engines, acting as the primary housing for the crankshaft. The crankshaft converts the reciprocating motion of

Understanding Crankcase Function & Symptoms | RepairPal Mounted between the engine block and the oil pan, the crankcase supports the crankshaft, allowing it to spin freely while transmitting power (torque) from the engine

Crankcase - Wikipedia The crankcase often forms the upper half of the main bearing journals (with the bearing caps forming the other half), although in some engines the crankcase completely surrounds the

How does a Crankcase Work? | What is the Function of Crankcase? The crankcase is an

enclosed chamber or housing that surrounds and contains the crankshaft of the engine. It's the largest part of the engine but must be designed to be strong and light

What is a Crankcase and What Does it Do? - The Engineering Choice A crankcase is the housing for the crankshaft in a reciprocating internal combustion engine. In most modern engines, the crankcase is integrated into the engine block

Crankcase: Function, Diagram, Parts, Ventilation, Evacuation The upper half of the crankcase is made by the lower portion of the engine block and the lower half of the crankcase is connected to the upper half to form a crankcase cavity

What is a Crankcase? (with pictures) - WikiMotors An intrinsic component of an internal combustion engine, the crankcase is a drilled metal frame that houses several parts, notably the crankshaft. Its main universal function is to

Crankcase: Definition, Construction, Functions, Types, Advantage Crankcase A crankcase is a fundamental component in internal combustion engines, serving as the housing for the engine's crankshaft, connecting rods, and pistons. It encloses the lower

What Is The Crankcase In An Engine? Engine Anatomy In essence, the crankcase is a pivotal component of an engine, specifically within the realm of internal combustion engines. Acting as a protective housing, it encloses and

Structure and function of a crankcase (3D animation) What is the purpose of a crankcase? What are the requirements of a crankcase? What is the structure of a crankcase? What material is it made of? Find out in this video

Crankcase: Definition, Function & Engine Role The crankcase is a fundamental component in internal combustion engines, acting as the primary housing for the crankshaft. The crankshaft converts the reciprocating motion of

Understanding Crankcase Function & Symptoms | RepairPal Mounted between the engine block and the oil pan, the crankcase supports the crankshaft, allowing it to spin freely while transmitting power (torque) from the engine

Crankcase - Wikipedia The crankcase often forms the upper half of the main bearing journals (with the bearing caps forming the other half), although in some engines the crankcase completely surrounds the

How does a Crankcase Work? | What is the Function of Crankcase? The crankcase is an enclosed chamber or housing that surrounds and contains the crankshaft of the engine. It's the largest part of the engine but must be designed to be strong and light

What is a Crankcase and What Does it Do? - The Engineering Choice A crankcase is the housing for the crankshaft in a reciprocating internal combustion engine. In most modern engines, the crankcase is integrated into the engine block

Crankcase: Function, Diagram, Parts, Ventilation, Evacuation The upper half of the crankcase is made by the lower portion of the engine block and the lower half of the crankcase is connected to the upper half to form a crankcase cavity

What is a Crankcase? (with pictures) - WikiMotors An intrinsic component of an internal combustion engine, the crankcase is a drilled metal frame that houses several parts, notably the crankshaft. Its main universal function is to

Crankcase: Definition, Construction, Functions, Types, Advantage Crankcase A crankcase is a fundamental component in internal combustion engines, serving as the housing for the engine's crankshaft, connecting rods, and pistons. It encloses the lower

What Is The Crankcase In An Engine? Engine Anatomy In essence, the crankcase is a pivotal component of an engine, specifically within the realm of internal combustion engines. Acting as a protective housing, it encloses and

Structure and function of a crankcase (3D animation) What is the purpose of a crankcase? What are the requirements of a crankcase? What is the structure of a crankcase? What material is it made of? Find out in this video

Crankcase: Definition, Function & Engine Role The crankcase is a fundamental component in

internal combustion engines, acting as the primary housing for the crankshaft. The crankshaft converts the reciprocating motion of

Understanding Crankcase Function & Symptoms | RepairPal Mounted between the engine block and the oil pan, the crankcase supports the crankshaft, allowing it to spin freely while transmitting power (torque) from the engine

Back to Home: <https://staging.devenscommunity.com>